


This model contains a varifocal lens that has been pre-focused to a wide angle setting. To adjust to a telephoto mode:


- 1. Adjust the innermost thumbscrew (Wide/Telephoto) to give the required field of view.
- 2. Refocus by adjusting the outermost thumbscrew (Focus Screw).

INS- Varifocal Lens Focusing 10/15/08 Rev C

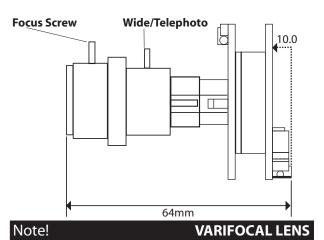

This model contains a varifocal lens that has been pre-focused to a wide angle setting. To adjust to a telephoto mode:


- 1. Adjust the innermost thumbscrew (Wide/Telephoto) to give the required field of view.
- 2. Refocus by adjusting the outermost thumbscrew (Focus Screw). INS- Varifocal Lens Focusing 10/15/08 Rev C

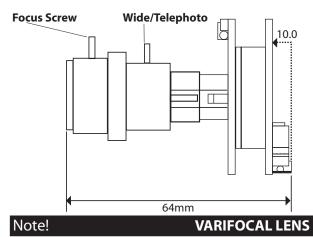

This model contains a varifocal lens that has been pre-focused to a wide angle setting. To adjust to a telephoto mode:


- 1. Adjust the innermost thumbscrew (Wide/Telephoto) to give the required field of view.
- 2. Refocus by adjusting the outermost thumbscrew (Focus Screw).

INS- Varifocal Lens Focusing 10/15/08 Rev C

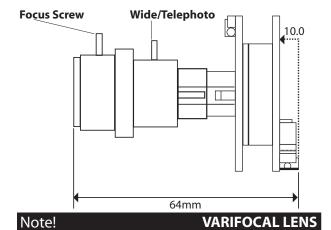


This model contains a varifocal lens that has been pre-focused to a wide angle setting. To adjust to a telephoto mode:

- 1. Adjust the innermost thumbscrew (Wide/Telephoto) to give the required field of view.
- 2. Refocus by adjusting the outermost thumbscrew (Focus Screw). INS- Varifocal Lens Focusing 10/15/08 Rev C

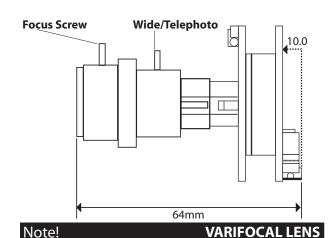

This model contains a varifocal lens that has been pre-focused to a wide angle setting. To adjust to a telephoto mode:

- 1. Adjust the innermost thumbscrew (Wide/Telephoto) to give the required field of view.
- 2. Refocus by adjusting the outermost thumbscrew (Focus Screw). INS- Varifocal Lens Focusing 10/15/08 Rev C

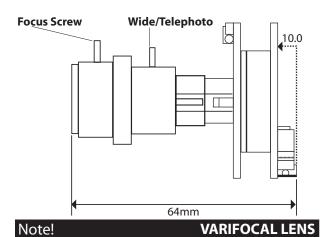

This model contains a varifocal lens that has been pre-focused to a wide angle setting. To adjust to a telephoto mode:

- 1. Adjust the innermost thumbscrew (Wide/Telephoto) to give the required field of view.
- 2. Refocus by adjusting the outermost thumbscrew (Focus Screw). INS- Varifocal Lens Focusing 10/15/08 Rev C